




USO E INSTALLAZIONE
USE AND INSTALLATION
UTILISATION ET INSTALLATION
GEBRAUCH UND INSTALLATION
USO E INSTALACIÓN
USO E INSTALAÇÃO
使用与安装
الاستخدام والتركيب

Emblema R

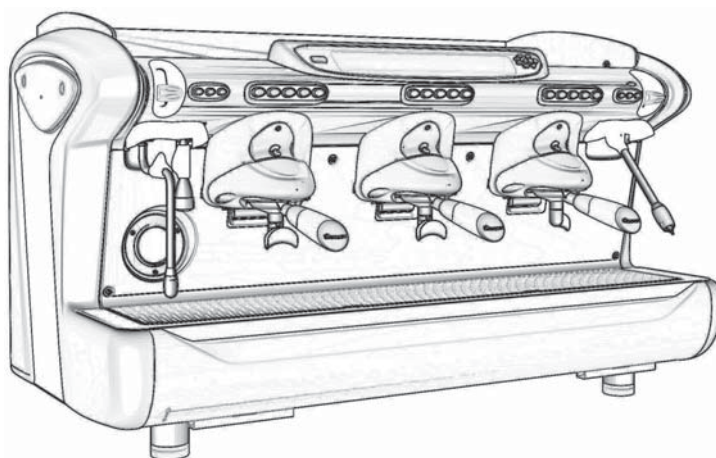

Code 974-047-000 (rev. 1745)

Italiano

Istruzioni originali

English

Translation of the original instructions

Français

Traduction du manuel d'origine

Deutsch

Übersetzung der Originalanleitung

Español

Traducción de las instrucciones originales

Português

Tradução das traduções originais

中文

原版说明译文

عربي

ترجمة التعليمات الرئيسية

Italiano

English

Français

Deutsch

Español

Português

中文

عربي

Dear Madam, Dear Sir

Congratulations on your new Faema!

With this purchase, you have chosen an advanced espresso coffee machine built using the most cutting edge technology. This machine not only offers you a perfect combination of efficiency and functionality, but also provides you with all the tools you need to do your job in the best possible way. We recommend that you take some time to read this Use and Maintenance Booklet. It will help you become more familiar with your new espresso machine, which we're sure you are looking forward to using.

Wishing you all the best.

GRUPPO CIMBALI S.p.A.

Index

	Page		Page
1. General Rules	2	18. Customer parameters menu	16
2.1 Transport and handling	3	Language selection	16
2.2 Installation Rules	4	Service time menu	17
3. Electrical Installation Rules	5	Date and time	17
4. Water Installation Rules	5	19. DATA menu - Counter display and zeroing	18
5. Installation Check-up	6	20. How to access the programming mode	18
6. Rules for the worker operating the machine	7	21. Key menu - Coffee selection	19
7. Caution	8	22. Key menu - Hot water selection	19
8. Maintenance and Repairs	8	Programming measures using the "SELF-LEARNING" function	20
9. Dismantling the machine	9	23. Key menu - Steam and air selection	21
		Banner	21
USE		24. Cleaning and maintenance	22
10. Day-to-day operation	10	Simultaneous washing	23
Manual powering	10	Sequential washing	24
Automatic switch off / switch on	10	Single washing:	25
Energy saving standby	10	Block function	26
Energy saving mode	10	Changing the water in the boiler	26
Forced switch on	10	Filter-holders	26
Description display symbols	11	Steam and hot water dispensing pipes	27
11. Changing the water in the boiler	12	Grille and drip basin	27
12. Cup-Warmer (where contemplated)	12	Discharge Basin	27
13. Delivery of the coffee	13	Bodywork	27
14. Hot water dispensing	13	25. Defects - Malfunctions	28
15. Steam dispensing	14		
		ILLUSTRATIONS	IX
CUSTOMER PROGRAMMING		Changing the electric power supply	XII
16. Data flow chart	15	Changing the Voltage of the Transformer	XVI
17. Clock adjustment	16	Service Line	XIX

1. General Rules



Please read the warnings and rules in this User's Manual carefully before using or handling the machine in any way because they provide important information regarding safety and hygiene when operating the machine. Keep this booklet handy for easy reference.

- The machine was designed solely for preparing espresso coffee and hot beverages using hot water or steam, and for warming cups.
- The machine must be installed in a place where it is only used by carefully trained staff that knows the risks tied to using the machine.
- The machine is for professional use only.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
Children shall not play with the appliance.
Cleaning and user maintenance shall not be made by children without supervision.
- The machine must not be left unattended.
- The machine must not be used outdoors.
- If the machine is stored in rooms where the temperature can drop below freezing, empty the boiler and water circuit tubes.
- Do not expose the machine to atmospheric agents (rain, sun, and cold).
- Do not clean the machine with jets of water.
- Noise: assessed acoustic pressure level 76 dB(A) (+/- 2.5dB).
- If the power supply cord is damaged, it can only be replaced by qualified and authorized technicians.
- If the machine is used improperly or for purposes other than those described above, it can be a source of danger. The manufacturer will not be held responsible for damages caused by improper use of the machine.





WARNING

Installation, dismantling, and adjustments must only be performed by qualified and authorized technicians.

Carefully read the warnings and rules in this manual because they provide important information regarding safe installation, use and maintenance of the machine.

Keep this booklet handy for easy reference.

2.1 Transport and handling

Packaging

- The machine is delivered in a robust cardboard package, with appropriate internal protection. The package features the standard symbols indicating rules to be followed when handling and storing the machine.
- Transport must be carried out according to the instructions on the package, handling with appropriate caution and avoiding impact of any type.
- Do not expose the machine to atmospheric agents (rain, sun, and cold).

Checks on receipt

- On receipt of the machine, carefully check all transport documentation is correct (against label on package).
- After removing the machine from its packing materials, make sure that the machine and its safety devices are intact.
- Packing materials (plastic bags, polystyrene foam, staples, etc.) must be kept out of the reach of children because they are potentially hazardous.

Advice for disposal of packaging



The packaging materials are eco-compatible and recyclable. For the protection of the environment they must not be dumped, but taken to a recovery / waste-disposal centre, according to local regulations.


Handling



Staff responsible for moving the machine must realize the risks in moving heavy loads.

Move the machine carefully, using, where possible, the correct lifting equipment (fork lift, for example). If moving the machine by hand, make sure:

- enough people are available for the task, depending on the machine weight and difficult handling;
- to always use the necessary safety gear (shoes/gloves).

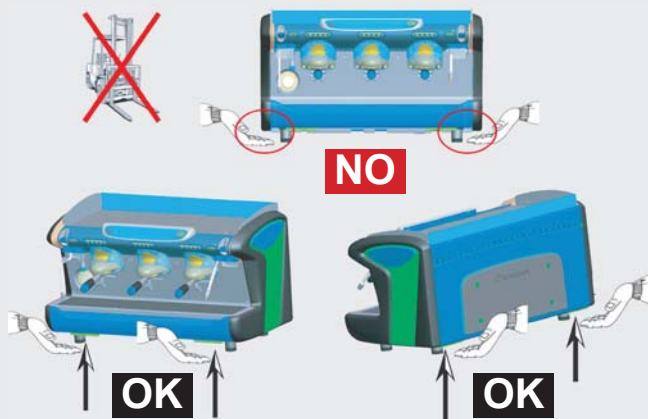

2.2 Installation Rules

- Before plugging in the machine, make sure that the information on the nameplate (voltage, etc.) matches that of the electrical and water systems.
- Check the condition of the power supply cord; if it is damaged it must be replaced.
- Completely unwind the power supply cable.
- The coffee machine should sit on a flat, stable surface at least 20 mm from walls and from the counter. Keep in mind that the highest surface on the machine (the cup warmer tray) sits at a height of at least 1.2 meters. Make sure there is a shelf nearby for accessories.
- Room temperature must range between 10° and 32°C (50°F and 90°F).
- An electrical outlet, water connections, and a drain with siphon must be in the immediate vicinity.
- Do not install in rooms (kitchens) that are cleaned with jets of water.
- Do not obstruct openings or ventilation and heat vents.
- Do not install the machine outdoors.





3. Electrical Installation Rules

Prior to installation, make sure there is a circuit breaker installed with a distance between the contacts that allows for complete disconnection when there is a category III overload and that provides protection against current leakage equal to 30 mA. The circuit breaker must be installed on the power supply in compliance with installation rules.

If the power supply is not working properly, the machine can cause transitory voltage drops.

The electrical safety of this machine is only ensured when it is correctly connected to an efficient earthing system in compliance with the electrical safety laws in force. This fundamental safety requirement must be verified. If in doubt, request that a qualified electrician inspect the system. The manufacturer cannot be held responsible for any damage caused by the lack of an earthing system on the electrical supply.

Do not use adaptors, multiple plugs, and/or extension cords.

Check that the type of connection and voltage correspond with the information on the nameplate: see *illustrations chapter figure 1*.

For machines with a Y connection: see *illustrations chapter figure 2*.

For machines with a Δ connection: see *illustrations chapter figure 3*.

For machines with a single-phase connection: see *illustrations chapter figure 4*.

4. Water Installation Rules

WATER REQUIREMENTS

Water used in coffee machines must be potable and suitable for human consumption (see laws and regulations in force). Check on the machine's water inlet that the pH and chloride values comply with current law.

If the values do not fall within the limits, an appropriate water treatment device must be inserted (respecting the local laws and compatible with the machine).

If the machine uses water with a hardness exceeding 8°F (4.5 °D), a specific maintenance plan must be implemented according to the hardness detected and machine usage.

WARNING

Only use the supplied parts for installation. If other parts are installed, they must be new (unused pipes and gaskets for the water connection) and they must be able to come in contact with potable water suitable for human consumption (according to local laws in force).

WATER CONNECTIONS

Place the machine on a flat surface and stabilize it by adjusting and securing the feet.

Hook up the water connections as shown in the *Illustrations chapter Figure 5*, respecting the hygiene, water safety, and anti-pollution laws in the country of installation.

Note: If the water pressure can rise above six bar, install a pressure reducer set at 2-3 bar. See *Illustrations chapter Figure 6*.

Water draining tube: place the end of the water draining tube in a drain with a siphon for inspection and cleaning.

IMPORTANT: The curves of the draining tube must NOT bend as shown in *Illustrations chapter Figure 7*.



5. Installation Check-up



WARNING: AFTER INSTALLATION, CHECK TO SEE IF THE MACHINE IS WORKING PROPERLY (see the Installation Module C).

WATER CONNECTIONS

- No leaks from the connections or tubes

FUNCTIONING

- Boiler and operating pressures are normal.
- The pressure gauge is working properly.
- The self-leveling device is working properly.
- The expansion valves are working properly



WARNING: ONCE THE MACHINE HAS BEEN INSTALLED AND IS READY FOR USE, BEFORE ALLOWING THE WORKER TO START USING THE MACHINE, WASH THE INTERNAL COMPONENTS ACCORDING TO THE INSTRUCTIONS BELOW:

GROUPS

- Hook up the filter holders to the groups (without coffee).
- Let each group dispense water for about a minute.

HOT WATER

- Continuously dispense hot water (pressing the appropriate button) until at least 6 liters of water have been used for a machine with 2 groups, 9 liters for a machine with 3 groups and 12 liters for a machine with 4 groups (see the "Hot water dispensing" chapter in the User's Manual).

STEAM (also with Autosteam)

- Dispense steam from the nozzles for about a minute, using the appropriate buttons.



6. Rules for the worker operating the machine

BEFORE YOU START



WARNING: BEFORE YOU START OPERATING THE MACHINE, WASH THE INTERNAL COMPONENTS FOLLOWING THE INSTRUCTIONS INDICATED BELOW. THESE STEPS MUST BE REPEATED AT LEAST ONCE A DAY AND WHEN THE MACHINE HAS NOT BEEN OPERATED FOR MORE THAN 8 HOURS.

Groups

- Hook up the filter holders to the groups (without coffee).
- Let each group dispense water for about a minute.

Hot Water

- Run the water replacement as indicated in the section "*Changing the water in the boiler*".

Steam (also with Autosteam)

- Dispense steam from the nozzles for about a minute, using the appropriate buttons.

ON THE JOB

Steam dispensing (also with Autosteam)

- Before heating the beverage (water, milk, etc.), open the steam nozzle for at least 3 seconds and let the steam escape so that the condensation is eliminated.

Coffee dispensing

- If the machine has not been used for more than an hour, before making coffee, dispense about 100 cc and discard the liquid.

Hot water dispensing

- If the machine has not been used for more than an hour, before using the hot water, dispense about 200 cc and discard the liquid.

Cleaning the coffee circuits

- Please read the specific section in the user's manual to learn how to clean these circuits.



7. Caution



Danger of burns

The areas marked with this sign become hot. **Great care should be taken when in the vicinity of these areas.**



WARNING: Hot surface
 ACHTUNG: Heisse Oberfläche
 ATTENTION: Surface chaude
 ATTENZIONE: Superficie calda

GENERAL

The manufacturer disclaims all liability for damages to items or persons due to improper use or due to the coffee machine being used for reasons other than its intended use.

Never work the coffee machine with wet hands or naked feet.

Danger of Burns

Do not place the hands or other parts of the body close to the coffee distribution points, or near to the steam and hot water nozzles.

Ensure that the machine is not handled by children or persons who have not been instructed in its correct use.

Cup-warming plate

Place only coffee cups, cups and glasses to be used in conjunction with the coffee machine on the cup-warming plate.

Ensure that the coffee cups are completely

drained before placing them on the cup-warming plate.

No other objects shall be placed on the cup-warming plate.



MACHINE CLOSE-DOWN

When the machine is left unattended for a prolonged period (for example out of hours), carry out the following steps:

- Remove the plug or turn off the main switch;
- Close the water tap.

NOTE: for machines which can be programmed to switch on and off automatically, the power must be left on only if this function is active.

Non-compliance with these safety measures exonerates the manufacturer from all liability for malfunctions, damage to property and/or injury to persons.

8. Maintenance and Repairs

If the machine is not working properly, turn off the machine, turn off the main off-on switch, and call the service center.

If the power supply cord is damaged, switch off the machine and request a replacement from the service center.



To ensure safety during operation, it is absolutely necessary to:

- follow all the manufacturer's instructions;
- have qualified and authorized technicians periodically check that all safety devices are intact and functioning properly (the first inspection within three years of purchase and every year after that).



WARNING

Maintenance by unqualified people can jeopardize the safety and conformity of the machine.

Only use qualified, authorized technicians for repairs.

WARNING

Only use original spare parts guaranteed by the manufacturer.

If original spare parts are not used, the manufacturer warranty will no longer be valid.

WARNING

After maintenance, perform the installation CHECK-UP as indicated in the specific section of the user's manual.



9. Dismantling the machine

Pursuant to European Directive 2012/19/UE on electrical waste (WEEE), users in the Europe-an community are advised of the following.

Electrical equipment cannot be disposed of as ordinary urban waste: it must be disposed of according to the special EU directive for the recycling of electric and electronic equipment.



Suitable differentiated waste disposal so that the machine can then be recycled, treated and disposed of in an environmentally friendly manner contributes to avoiding possible negative effects on the environment and health, and encourages the reuse and/or recycling of the materials from which the machine is made.

Improper disposal of electric equipment that fails to respect the laws in force will be subject to administrative fines and penal sanctions.

GRUPPO CIMBALI electrical equipment is marked with a pictogram of a garbage can inside a barred circle. This symbol means that the equipment was sold on the market after August 13, 2005, and must be disposed of accordingly.




DISMANTLING THE MACHINE
To protect the environment,
please proceed in compliance
with the local laws in force.

ENVIRONMENTAL INFORMATION

This product contains a non-rechargeable lithium (lithium manganese dioxide chemistry) button cell battery fully encapsulated in the final product.

Recycle or dispose of batteries in accordance with the battery manufacturer's instructions and local/national disposal and recycling regulations.

Location of the battery

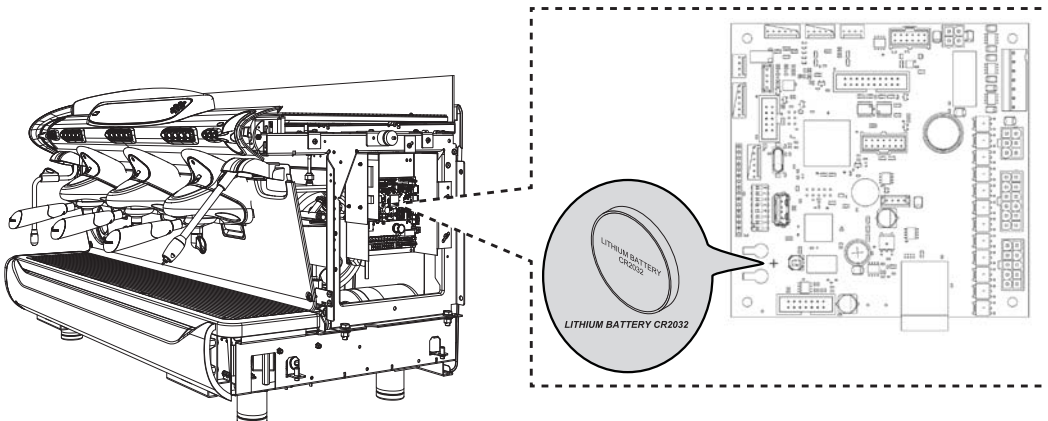

USE

10. Day-to-day operation




“Before setting the machine at work, make sure that:

- the main electric power switch is on;
- the mains water cock has been turned on”.


MANUAL POWERING



Press the luminous main switch to turn on the machine.

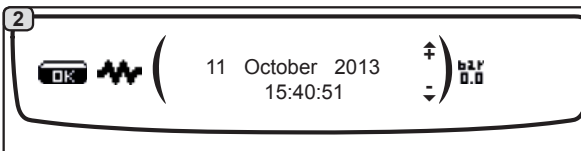

During this phase the boiler is loaded and the heating phase begin.

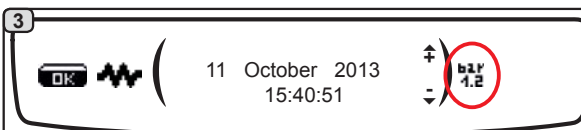


The preset working pressure must be reached before the machine is ready for use.

AUTOMATIC SWITCH OFF / SWITCH ON

The machine can be set to switch off and switch on at programmed times. Consult the “**Service time menu**” chapter to set the “**ON Time**” switch-on time and the “**OFF Time**” switch-off time.

When a service time is set, the machine automatically switches off at the programmed time. During the automatic switch-off phase, the following message will appear on the display:



Note. When the machine is working in the automatic on/off function do not use the general switch (1) to switch off the machine. If this happens, the machine will not be able to switch on again automatically.

The machine switches on automatically at the programmed time. The messages displayed and the operations performed by the machine are the same as those described in the paragraph “**MANUAL POWERING**”.


ENERGY SAVING STANDBY

When the machine is switched off, it can be set to the ENERGY SAVING mode.

When this function is enabled, the machine resistance is not completely disabled and keeps the boiler pressure at 0.2 bar.

Please consult the chapter “**Service time menu**” for setting this function.

ENERGY SAVING MODE


The ENERGY SAVING function can also be enabled manually if you press the key and hold it for several seconds .

During this phase:

- If the boiler pressure is set at a value exceeding 1.2 bar, the pressure is lowered to 0.8 bar;
- If the boiler pressure is set at a value below 1.2 bar, the pressure is lowered by 0.4 bar below the set value.

Press any dispensing key to exit the ENERGY SAVING mode and return to the machine work phase.

FORCED SWITCH ON

Press the “STOP/Coffee continue”  key for a few seconds to force the machine on again.


Note. Forcing the machine on does not change the programmed on/off times.

Note. At this point the machine will remain on until the next switch off time is reached.

To immediately return the machine to “off” as originally programmed, switch it off and on again using the general on-off switch (1).





This symbol indicates the boiler water level. During the loading phase, the dark bottom part of the icon blinks. When the optimum level is reached, the symbol looks like this: 



This symbol (dark inside) indicates that the resistance is activated and functioning.

When the boiler pressure reaches the set value, the icon looks like this



(light inside).

When the machine is in operation, the two icons



alternate on the display, indicating the presence of the electric heating.

Note: the customer cannot switch on or switch off the electric heating.

When the on/off function is programmed, the electric heating takes place automatically.




This indicates that the heating resistance has been disabled.



This symbol indicates the boiler pressure value.




This symbol indicates that the machine is pre-heating or the boiler pressure has dropped below 0.5 bar. This also indicates the boiler heating situation, meaning that it appears if one or more boilers are still in the first heating phase or if their temperature has fallen below 55°C.

If one of the STOP/continuous coffee"  keys is pressed, coffee will be served at the temperature reached at that moment.

All of the other keys are disabled because the working pressure has not been reached.

While waiting for the machine to be ready for use, insert the filter holders in the units.

The machine has reached the set work pressure and temperature when the icon  disappears from the display.

Press a coffee selection key for each keypad to adjust the temperature between the group and filter holder.



This symbol indicates that the technical programming menu can be accessed.



11. Changing the water in the boiler



Before operating the machine change the water in the boiler.”


Ensure that the indication on the display corresponds to the working pressure value.

Keep a hot water distributor key (**13a - 13c**) pressed down for approximately 5 seconds.

The following message will be displayed: “**WATER CHANGE**”. The water from the boiler will drain from the hot water nozzle (**10**) (60 - 70% ca. of the total capacity).

The boiler resistance and all dispensing keys will be disabled. Dispensing will stop automatically (Note. The delivery can be interrupted in whichever moment by means of the push button **STOP 13b**).

After the procedure, the machine will return to its normal functions and the boiler will be refilled with fresh water.

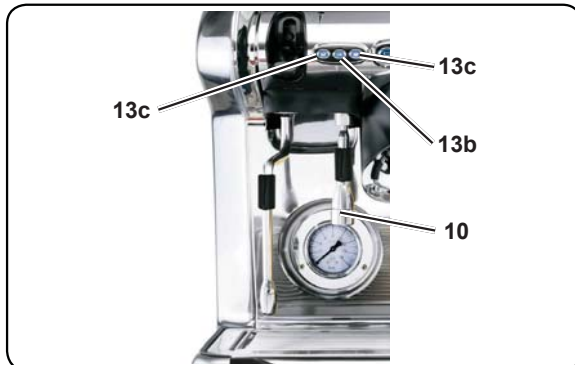

12. Cup-Warmer (where contemplated)



CAUTION: do not put any cloth on the cup-warmer.

The machines have a cup warmer tray (**23**) for stocking and pre-heating the cups.

Only place cups and glasses used with the coffee machine on the cup tray. **No other objects must be placed on the tray.**

Thoroughly drain the cups before placing them on the tray.


To activate the resistance of the cup warmer tray (**23**) press button (**6**); to change the cup-warmer power, press the (**6**) key a number of times.

- All LEDS (**5**) on = full power
- All LEDS (**5**) off = OFF

To desactivated the heating of tray (**23**) press more times the key (**6**) until all the leds are off.

N.B. The heating of the cup warmer tray (23**) is deactivated during the automatic switch off phase.**

The condition in effect at the time when the machine was switched off will be restored the next time the machine automatically switches on.

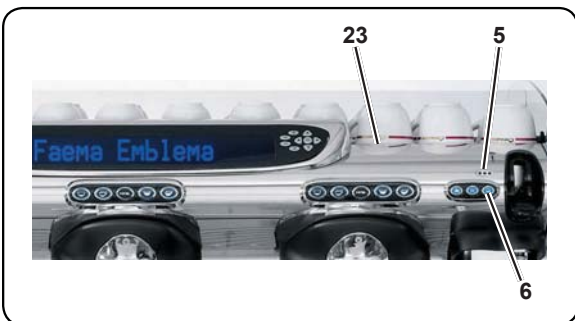

13. Drinks distribution - coffee

Remove the filter carrier (21 or 25), clean it of the used coffee grounds and refill it with 1 or 2 doses of ground coffee, according to the filter carrier used. Uniformly press the ground coffee in the filter holder by means of the pressing disc of the grinder. Remove any coffee grounds from the edges of the filter. Insert the filter carrier (21 or 25) to the group, locking it firmly in place. Position the cup (or cups) under the spout (or spouts) of the filter carrier (21 or 25).

A version

Press the coffee distribution key (32, 33, 35 or 36) corresponding to the desired dose. The corresponding led lights up, the coffee will be issued and will stop automatically upon completion.


Press the continuous/STOP distribution button (37) for a continuous distribution.

The distribution, both dosed and continuous, may be interrupted at any time by pressing the continuous/STOP key (37).

S version

Press the coffee dispensing button (37) and dispense.

When the desired dose is obtained, press button (37) again to stop dispensing.

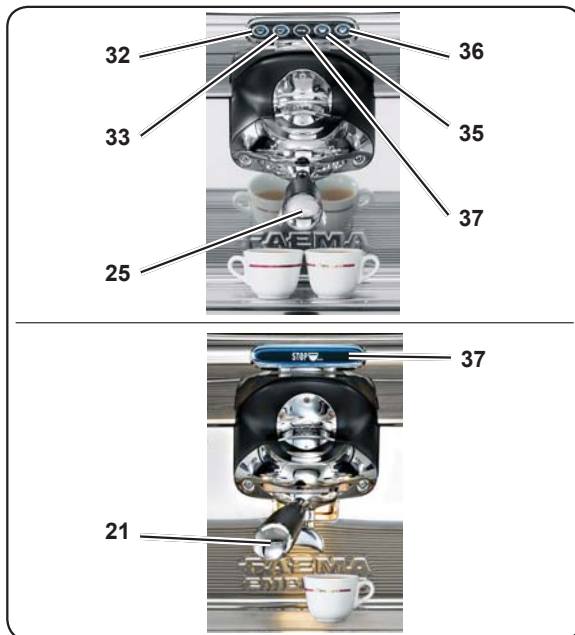

Do not remove the coffee filter before the coffee dispensing has completed.

14. Drinks distribution - hot water



Scalding hazard! Use the appropriate insulating devices (A) to move the water and steam wands.

After having positioned the appropriate container under the hot water nozzle (10), distribution is made in two ways.

DOSED FUNCTION

Press one of the hot water distribution keys (13a or 13c). The corresponding led will light up, hot water will be issued and will stop automatically upon completion.


The distribution may be interrupted at any time by pressing the previously active key again (shown by the lighted led), or the Stop button, continuous hot water (13b).

CONTINUOUS FUNCTION

Press the hot water distribution key (13b).

Hot water will be issued continuously until the hot water key (13b) is pressed again to stop this function.

In continuous function the programmed dosed in the key is not changed.

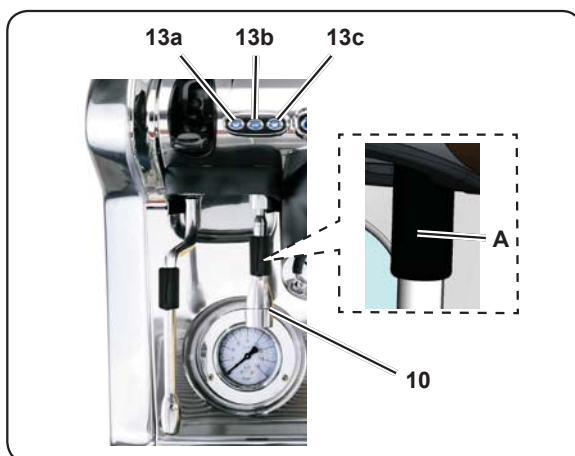

15. Drinks distribution - steam



Scalding hazard! Use the appropriate insulating devices (A) to move the water and steam wands.

Insert the steam nozzle (9a) into a suitable container, making sure the bulb is completely immersed in the milk.

Dispensing with the Autosteam selector (11) (where contemplated)

Select the type of milk you prefer (heated or frothed) by changing the position of the "steam selector lever" (11):

- rothed milk (maximum frothing level, lever position 4);
- frothed milk (medium frothing level, lever position 3);
- frothed milk (minimum frothing level, lever position 2);
- hot milk (lever position 1).

The relationship between the lever position (11) and the icon on the display is illustrated here.

Press the "AUTOSTEAM automatic steam key" (12a) to start dispensing.

Once the set temperature is reached, the steam will stop automatically.

Dispensing using the steam button (12)

Press the steam button (12) to start dispensing. Once the set temperature is reached, press the steam button (12) again and the steam will stop.

Steam dispensing with lever control

Completely immerse the left (20) steam nozzle into the container with the liquid to be heated and push the steam control lever (17) upwards.


Wait until the liquid has reached the desired temperature, then lower the steam command lever to stop the issue of steam.



Cleaning of steam dispensing pipes


At the conclusion of each steam dispensing phase:

- Using a clean sponge, wash with hot water removing any organic residue present. Rinse carefully.
- clean the inside of the steam nozzle as follows:
Turn the nozzle towards the cup tray and carefully activate steam dispensing at least once.

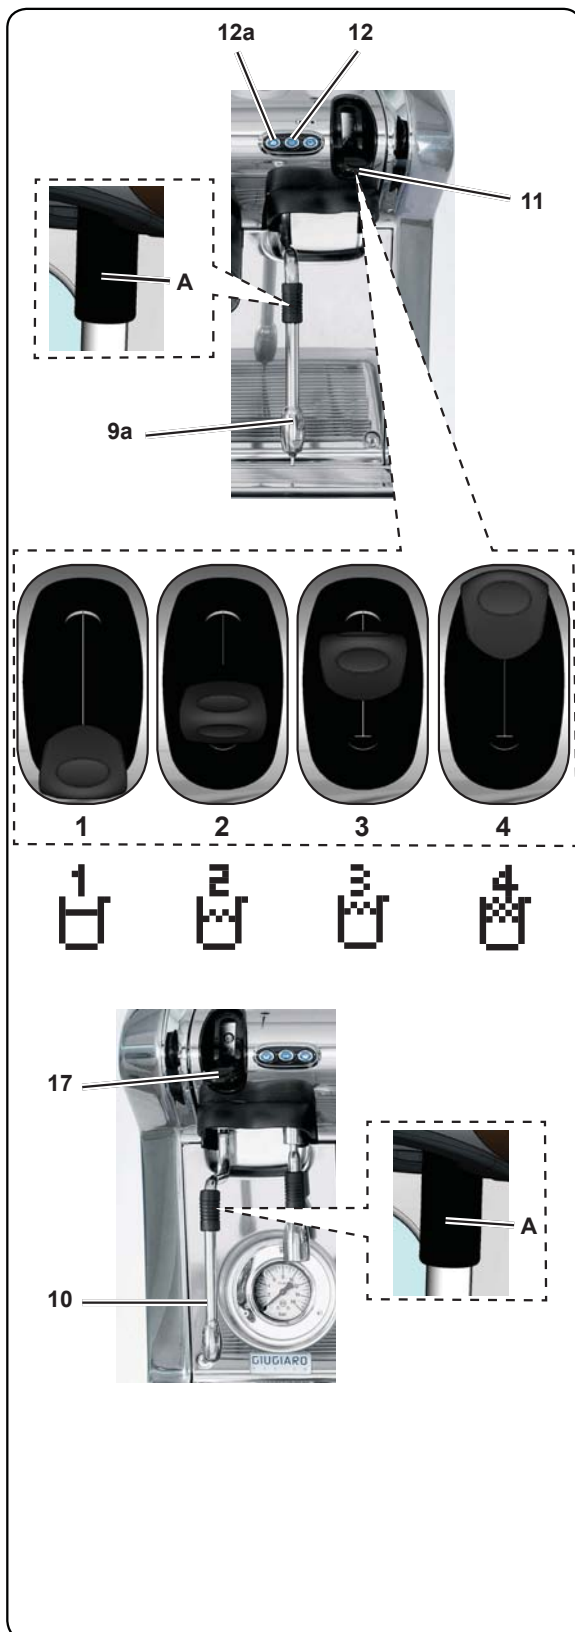


PROGRAMMING - USER MODE

16. Data flow chart - Customer programming

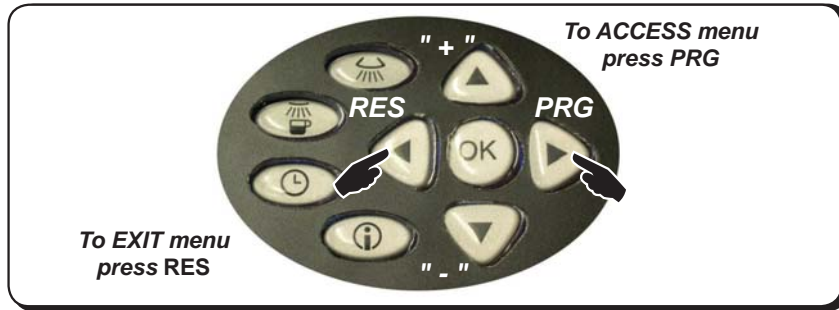

Only if "Prog. cliente" is YES and "Program. block" is NO

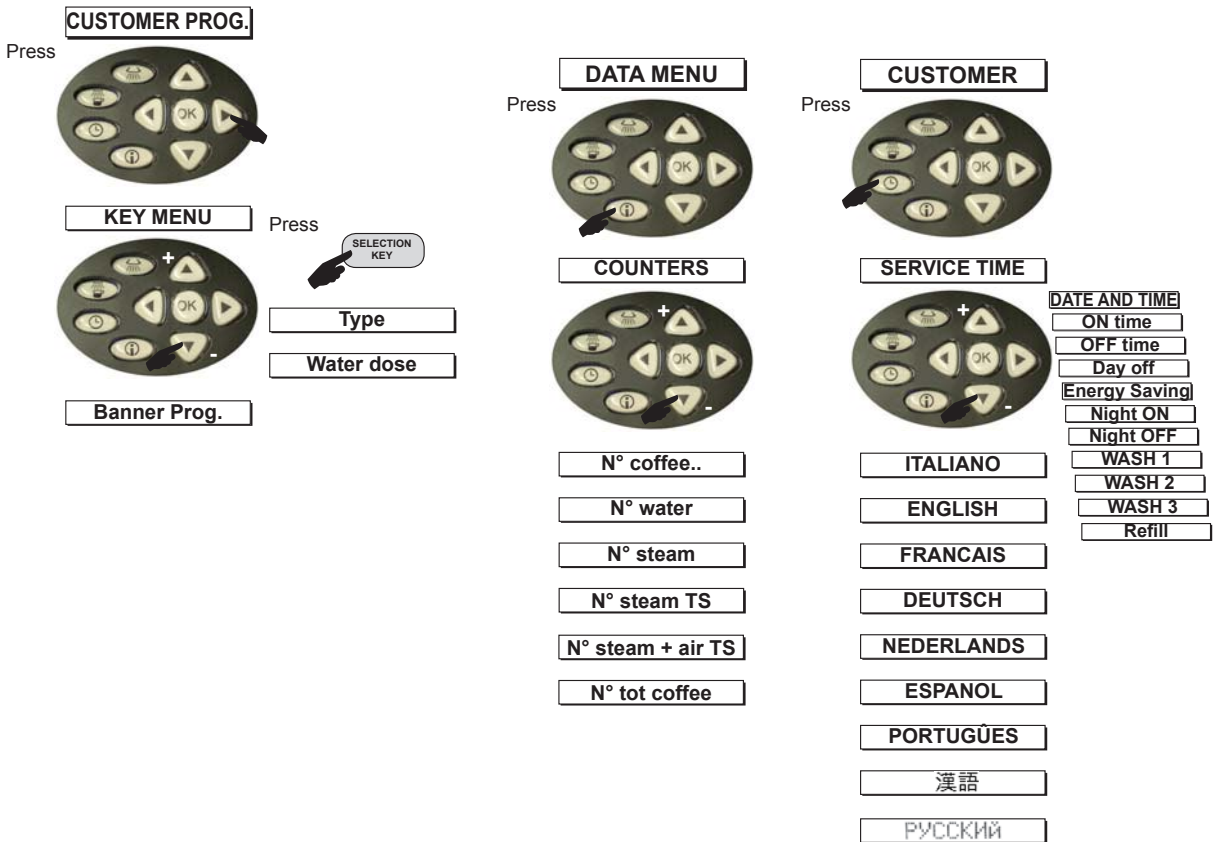


EXITING THE PROGRAMMING MENUS

Before exiting the menus:

- Press the **OK** key to confirm any changes made to settings;
- Press the **RES** (24) key to leave settings unchanged

The icons below will appear alternating on the lower part of the display:

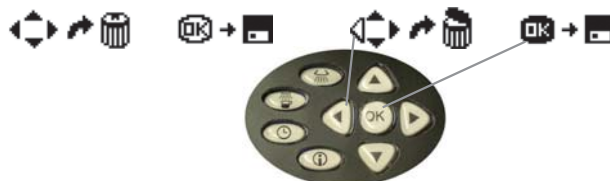


17. Clock adjustment

Use the ▲ “+” (30) and ▼ “-” (31) keys to adjust the clock. The time increases (or decreases) one minute each time the key is pressed.


If one of the keys (▲ 30 or ▼ 31) is pressed and held down for more than 10 seconds, the minutes setting stops and the hours setting increases (or decreases).

During the time setting phase, the seconds remain at “00”.



18. Customer parameters menu

To access “Customer parameters” press ⌚ key (34); the following message will appear on the display:




Language selection

To display the messages in a different language from that set, after entering into Programming mode, position the cursor on the desired language by pressing the ▲ “+” (30) and ▼ “-” (31) keys and then pressing the ► “PRG” key (29). The machine will restart with the messages provided in the selected language.


The display (14) provides a choice of the following languages.:

Italian, English, French, German, Dutch, Spanish, Portuguese, Japanese and Russian.



Service time menu

Pressing the ► “PRG” (29), the following message will appear on the display:



The following service time parameters can be modified:

- **ON time** (time the machine switches on);
- **OFF time** (time the machine switches off);
- **day off** (day on which the enterprise is closed);
- **Energy Saving** (enable/disable the Energy Saving function: YES/NO);
- **Night ON** (start time for evening beverage price: only when payment system is connected);
- **Night OFF** (end time for evening beverage price: only when payment system is connected);
- **Wash 1** (request - every 24 hrs - at the programmed hour; cannot be disabled);
- **Wash 2 ÷ 3** (hour of scheduled washes from 2 to 5);
- **Refill** (prompt for boiler water to be changed. Can be set by a technician to one of the following modes:
OFF: prompt for boiler water to be changed is deactivated;
HH:MM: a time is set for the prompt message to appear.
Note: the user can change the prompt time but cannot deactivate it, setting it to OFF.

With the prompt activated, the following message will appear on the display, at the set time: “EXECUTE RINSING BOILER”.

The prompt remains on the display for one hour, or until the user starts the cycle.

If the boiler water is not changed, this will not affect the functioning of the machine; however, the technician will be able to consult a list of requested/completed rinses using the INFO menu.

Further instructions can be found in the paragraph “Changing the water in the boiler” in this manual.

General indications

If there is no day off (i.e. the enterprise never closes), enter “none” for the “day off” item.

Enter the same time for the “ON time” and “OFF time” parameters (for example:

ON time 22:00

OFF time 22:00)

if the automatic switch on/switch off function is not required and you wish to manually switch the machine on and off.

“WASH 1” AND “WASHES 2 ÷ 3”

Washing cycles can be performed at pre-set times. At the set time, the display will show: this message “EXECUTE COFFEE WASHING”.

When requested, a washing cycle (simultaneous or sequential) will be performed as described in the “Cleaning Operations” paragraph.

Follow these steps to set the time for the washing cycle:

- Position the cursor on the line to be modified (WASH...);
- Press the “PRG” ► key (29);
- Change the time, using the ▲ “+” (30) and ▼ “-” (31) keys;
- Press the “RES” (24) ◀ key to confirm the setting.

Repeat the steps previously indicated to modify the washing times.

NOTES

Wash 1: wash 1 cannot be disabled. It is requested daily at the programmed hour, and always within 24 hours.

Washes 2 ÷ 3 : if the set hour for these wash cycles occurs when the machine is switched off, the request will be canceled.

Set OFF against the time so as to not activate these wash cycles.

OFF is displayed press the ▼ “-” (31) key the indicated time is “00:00”.

For more details, please consult the technical manual at the “Configuration menu - wash options” paragraph.

Date and time

To modify the date and hour, press the ► “PRG” key (29) on the “Service time” line and then press again the ► “PRG” key (29) on the corresponding line. The following message will appear:



Use the ▲ “+” (30) and ▼ “-” (31) keys to move the cursor to the entry to be modified, then press the ► “PRG” key (29). The cursor will turn into an arrow and it becomes possible to change the number for the selected entry by using the ▲ “+” (30) and ▼ “-” (31) keys.


Once the operation is completed, press the ◀ “RES” key (24) to confirm the data.


Note: the cursor changes back to ■.

Repeat the operation described above to modify other parameters.






19. DATA menu - Counter display and zeroing


Counters are displayed by pressing the  (27) key. The following message appears on the display (14):



Parameters calculated are:

- **N. coffee** (number of coffee beverages)
- **N. water** (number of times water is dispensed)
- **N. steam** (number of times steam is dispensed using the steam button)
- **N. steam TS** (number of times steam is dispensed using the turbosteam function)
- **N. steam + air TS** (number of times steam and air are dispensed using the turbosteam function)
- **N. tot coffee** (total number of coffee beverages).

Counters can be zeroed by aligning the cursor on the selected entry, pressing the  "PRG" key (29), and then pressing the  "+" (30) or  "-" (31) key.

Press the  "RES" key (24) to confirm zeroing.

The "N. coffee" entry appears for as many times as there are machine groups.

Note: Parameters that cannot be zeroed are:


- **N. tot coffee**


Press the  "RES" key (24) to return to the main menu.

20. How to access the programming mode










NOTE. ONLY if the item "Customer Progr." is set on "YES" and the item "Program. block" is set on "NO".

To access programming press the  "PRG" (29) key; the following message will appear on the display:




Press one of the dispensing keys on the selection panel; the relative led will remain on.

Use the  "+" (30) or  "-" (31) keys to position the cursor on the desired line, then press the  "PRG" (29) key. Always use the  "+" (30) and  "-" (31) keys to change the setting; at this point there are two possibilities:

- 1) confirm the changes made by pressing the  key
- 2) exit the menu and leave the settings unchanged by pressing the  "RES" (24) key.


Note: When modifying data, the cursor changes to "→", or a slide bar with maximum and minimum settings will appear:

If the "Customer Progr." is set to "NO", the following message will appear on the display:



21. Key menu - Coffee selection

Press one of the coffee dispensing keys on the selection panel (the relative led will remain on, not flashing). The following message will appear on the display:

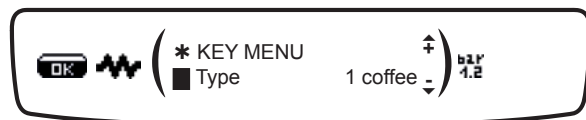

Each dispensing unit is controlled by a panel that permits programming the amount of desired dispensing for each button.

The following coffee selection parameters can be modified:
- **water dose** (volumetric dosage pulses)



22. Key menu - Hot water selection

Press the hot water dispensing key. The following message will appear on the display:



The following hot water selection parameters can be modified:

- **water dispensing time** (dispensing time in seconds.).




Programming measures using the "SELF-LEARNING" function

The water doses for coffee and the hot water doses can also be set using the "SELF-SETTING" function:



press and hold the STOP button for at least 8 seconds or until you hear a buzzer sound that will keep sounding throughout the programming. The menu below will appear on the display, showing the keys with the relative quantities for water for the coffee.

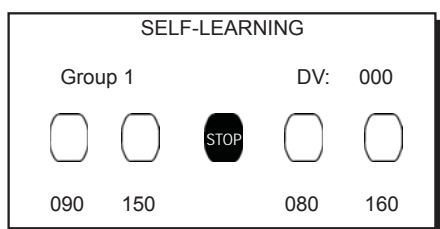


Hot water measures

- 1 - Press the button to be programmed and keep it pressed until the desired level is reached in the cup.



During this phase the time in seconds (top right of display) is increased; when the key is released, the setting reached is memorized and appears below the programmed key.

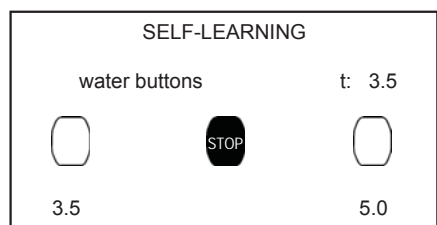

Coffee measures

- 1 - Fill the filter-holder with the required dosage of ground coffee and insert it in the dispenser unit.
- 2 - Put the cup or container under the filter-holder spouts and press the button to be programmed. Keep it pressed until the desired level is reached in the cup or container.



During this phase, the setting for the volumetric dosage pulses (top right of display) is increased. When the key is released, the setting reached is memorized and appears under the programmed key.


- 3 - Starting from step 1, continue programming, as desired, on all the coffee buttons.


- 2 - Starting from step 1, continue programming, as desired, on all the water buttons.

When finished, press the STOP button. The buzzer will turn off, thus confirming that the programming has been completed.



23. Key menu - Steam and air selection

Select the position of the "steam selector lever" (11) and press the "AUTOSTEAM automatic steam key" (12a) . The following will appear on the display:



The following parameters can be modified:

- **T stop steam** ("xxx°C" temperature for hot milk or frothed milk).

Setting options:

"0°" (0°, 40°÷85°, OFF) **setting:**

- manual steam stop


Any number between "40°÷85°" (0°, 40°÷85°, OFF)

- automatic steam stop

"OFF" (0°, 40°÷85°, OFF) **setting:**

- steam stop disabled

- **emulsion level** (a different emulsion level can be chosen for frothed milk: the value can be set between "0 ÷ 100", where 0 indicates no emulsion and 100 indicates continuous emulsion).

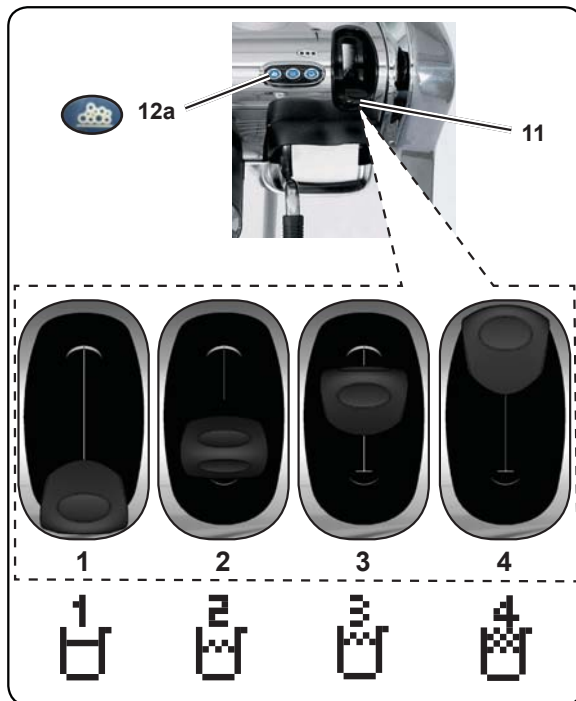


Banner


PRELIMINARY OPERATION



N.B.: the preparation of the file to load onto the pen drive is carried out with special software. For further information, and for instructions on using the software, please contact our service centre.

To access banner programming:

- position the cursor above the line "Prog. Banner";
- insert the pen drive containing the file generated with the appropriate software into the USB port; the symbol  will appear on the display.;
- press the ► "PRG" (29); the machine loads the messages to be displayed and at the end of this operation the following message will appear on the display:



At the end of the operation, press the ◀ "RES" (24) to return to the work screen.



24. Cleaning and maintenance



For correct application of the food safety system (HACCP), please follow the instructions in this paragraph. Washing must be carried out using original “Service Line” products, see details on the last page. Any other product could make the materials in contact with food unsuitable.

Procedure to effect at the end of the work day on all groups or when signaled by the machine.

COFFEE CIRCUIT CLEANING CYCLES

The purpose of the flushing cycle is to remove all traces of grease and scaling deposited when the coffee is dispensed. Failure to flush out the circuit will allow these deposits to solidify. This will impair the qualitative performance of the coffee circuit.

NOTE: the following operations must be carried out when the machine is on and pressurized.

ATTENTION, RISK OF SCALDING: During the wash cycles, hot water and steam will exit from the groups. Keep the hands and all other parts of the body well away until the cleaning cycle has terminated.

If the machine sends the warning message, “EXECUTE COFFEE WASHING” will appear on the display.

This message will continue to appear until the wash cycle is performed.

The coffee circuit can be washed in different ways:

- **simultaneous:** all groups are washed at the same time;
- **sequential:** each group is washed separately and in sequence. It is therefore possible to continue using the groups not involved in the washing process.

A third type of washing cycle can also be effected:

- **single:** The washing cycle can be made on a specific group without having to wash the remaining ones. Groups not involved in the washing cycle can still be used during that time.

Note: The single washing cycle cannot be carried out if the machine launches a warning message.

Note: If no wash cycle messages appear and the machine is used frequently, a wash cycle can be performed at any time.

Note: Once the wash cycle is underway, it CANNOT be stopped, even if the machine is switched off. If there is a power failure, when power is returned the message “EXECUTE WASHING” will be displayed. Complete the cleaning operations as described previously.

The wash cycles performed without request by the machine can be interrupted by switching off and switching back on the machine.


The simultaneous washing mode lasts 7 minutes. The single washing mode lasts 7 minutes for each dispensing group.

Programmed wash cycles that are not effected will be memorized by the machine.


To perform the washing cycles, follow the steps on the next pages.




SIMULTANEOUS WASHING

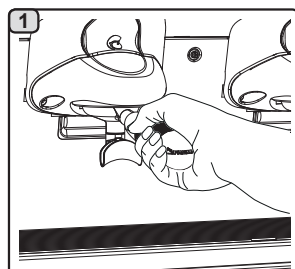

Remove the filter holder from the coffee group.

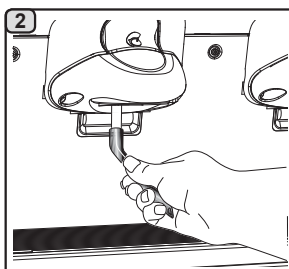

Using a brush, clean the cover gasket.

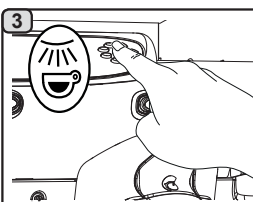

Hold down the coffee circuit washing key ☕ (26) for a few seconds.

The simultaneous washing screen (preset mode) will appear on the display.


↑/↓ to change sel.
→/OK to confirm




Confirm the washing mode using the key OK; the screen will display:

INSERT. FILTER HOLDER
push (☕)


INSERT. FILTER HOLDER
to confirm

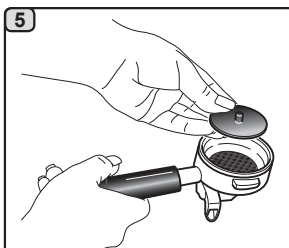


Insert the rubber disk into the filter-holder with its filter.

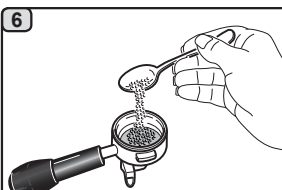

Pour in a packet or dosing cupful of detergent powder.

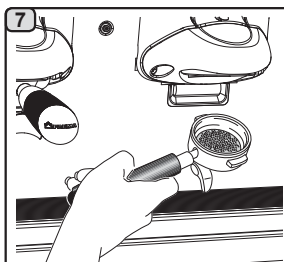

Hook all the filter holders to the groups.

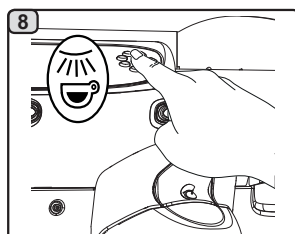


Press the coffee circuit wash key ☕ (26).

The wash cycle will start and the "GR... WASH" message will appear in alternated way on the display.


GR... WASH

At the end of wash cycle, the message "REMOVE GROUP FILTER HOLDER" will appear.

REMOVE GROUP
FILTER HOLDER

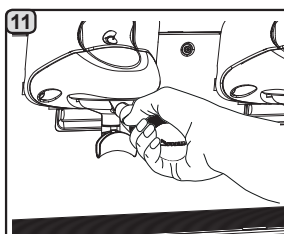

Remove the filter holders.

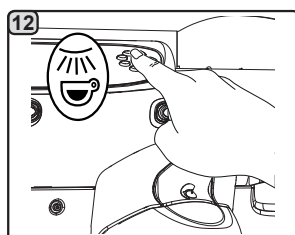

Press the coffee circuit wash key ☕ (26).

The message "GR... RINSE" will appear in alternated way on the display.

GR... RINSE

The washing cycle is complete after the rinsing phase.


11 October 2013
15:40:51




Do not remove the filter holder during coffee dispensing.




SEQUENTIAL WASHING

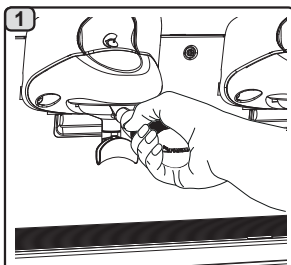

Remove the filter holder from the coffee group.

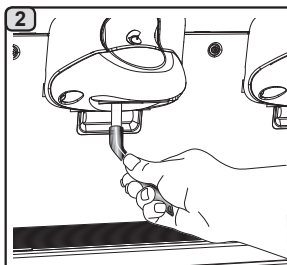


Using a brush, clean the cover gasket.

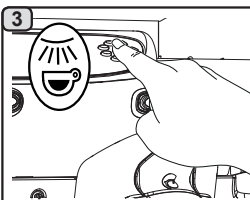

Hold down the coffee circuit washing key ☕ (26) for a few seconds.

The simultaneous washing screen (preset mode) will appear on the display.

↑/↓ to change sel.
→/OK to confirm




Use the ▲ "+" (30) and ▼ "-" (31) keys to pass to the *Sequential Washing* cycle. The scrolling icons of the machine groups will appear on the display.

↑/↓ to change sel.
→/OK to confirm




Confirm the washing mode using the key OK; the screen will display:


INSERT. FILTER
HOLDER
GROUP 1
push ☕
to confirm

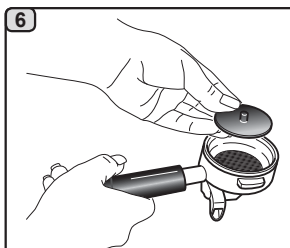


Insert the rubber disk into the filter-holder with its filter.

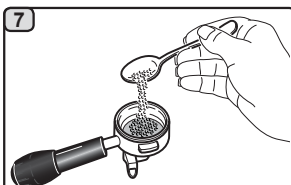

Pour in a packet or dosing cupful of detergent powder.

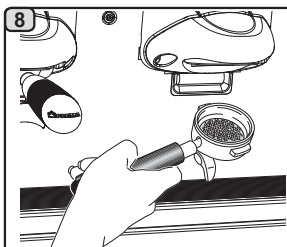

Hook the filter holder to Group 1.

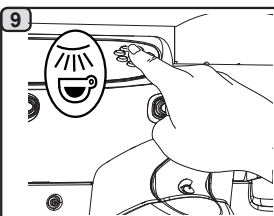


Press the coffee circuit wash key ☕ (26).

The Group 1 wash cycle will start and the "GR1 WASH" message will appear on the display.


GR1 WASH

At the end of the group 1 wash cycle, the message "REMOVE FILTER HOLDER GROUP 1" will appear.

REMOVE FILTER
HOLDER
GROUP 1
push ☕
to confirm

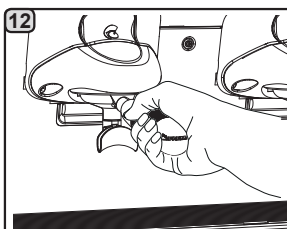

Remove the filter holder.

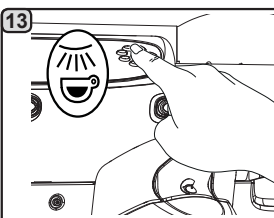

Press the coffee circuit wash key ☕ (26).

The message "GR1 RINSE" will appear.

GR1 RINSE

At the end of the group 1 rinse cycle, the message "EXECUTE GROUP 2 WASH" will appear.







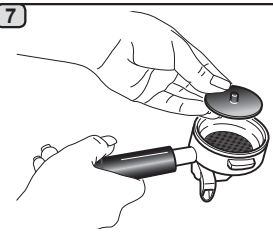
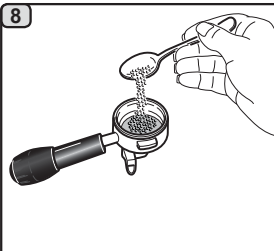
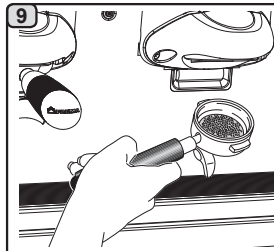
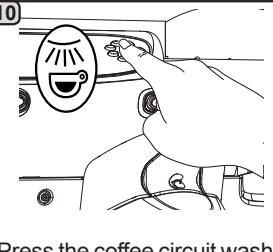
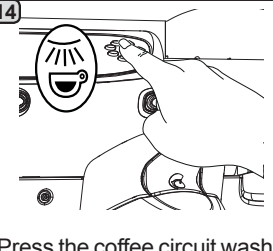

GROUP 2 WASH
push ☕
to confirm

Repeat the operations described above for all machine groups.



Do not remove the filter holder during coffee dispensing.

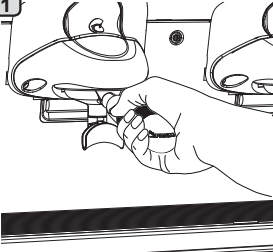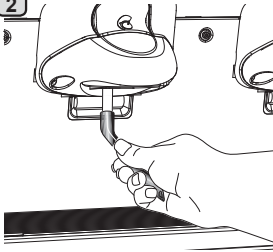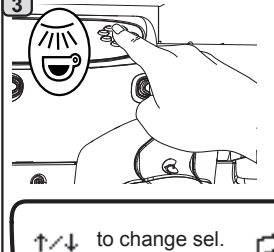SINGLE WASHING: Cannot be carried out if the machine launches a warning message.

<p>1</p>  <p>Remove the filter holder from the coffee group.</p>	<p>2</p>  <p>Using a brush, clean the cover gasket.</p>	<p>3</p>  <p>Hold down the coffee circuit washing key ☕ (26) for a few seconds. The simultaneous washing screen (preset mode) will appear on the display.</p> <div style="border: 1px solid black; padding: 5px;"> <p>↑/↓ to change sel. → OK to confirm</p>  </div>
<p>4</p> <p>Use the ▲ "+" (30) and ▼ "-" (31) keys to pass to the <i>Single Wash</i>. An arrow will highlight the group that will be washed.</p> <div style="border: 1px solid black; padding: 5px;"> <p>↑/↓ to change sel. → OK to confirm</p>  </div>		<p>5</p> <p>Use the ▲ "+" (30) and ▼ "-" (31) keys to choose the group to be washed.</p> <div style="border: 1px solid black; padding: 5px;"> <p>↑/↓ to change sel. → OK to confirm</p>  </div>
<p>6</p> <p>Confirm the choice (for example, group 3), using the key and OK. The screen will display:</p> <p style="text-align: center;">INSERT. FILTER HOLDER GROUP 3 push ☕ to confirm</p>	<p>7</p>  <p>Insert the rubber disk into the filter-holder with its filter.</p>	<p>8</p>  <p>Pour in a packet or dosing cupful of detergent powder.</p> <p>9</p>  <p>Hook the filter holder to Group 3.</p>
<p>10</p>  <p>Press the coffee circuit wash key ☕ (26).</p>	<p>11</p> <p>The Group 3 wash cycle will start and the "GR3 WASH" message will appear on the display.</p> <p style="text-align: center;">GR 3 WASH</p>	<p>12</p> <p>At the end of the group 3 wash cycle, the message "REMOVEFILTERHOLDER GROUP 3" will appear.</p> <p style="text-align: center;">REMOVE FILTER HOLDER GROUP 3 push ☕ to confirm</p>
<p>14</p>  <p>Press the coffee circuit wash key ☕ (26).</p>	<p>15</p> <p>The message "GR3 RINSE" will appear.</p> <p style="text-align: center;">GR 3 RINSE</p>	<p>16</p> <p>The washing cycle is complete after the rinsing phase.</p> <p>Repeat these steps for the groups you want to wash.</p> <div style="text-align: right;">  <p>Do not remove the filter holder during coffee dispensing.</p> </div>




Block function

When the machine is blocked, a warning message appears on the display: if the key corresponding to the requested wash cycle is pressed (key ☕ (26) or key (28)) and the instructions on the display are followed, the wash cycle is performed and the machine is no longer blocked. For example, if there is a "coffee block", the following message appears on the display:

If the coffee wash circuit key ☕ (26) is pressed, the previous message will be integrated as shown:

GROUP 1 LOCKED
EXECUTE WASHING

INSERT FILTER HOLDER
GROUP 1



When the "INSERT FILTER HOLDER - GROUP 1" message appears, the block message for Group 1 disappears. The block messages for groups still to be washed appear in alternation.

At this point, follow the steps on the previous pages for the wash cycle.


The number of the "blocked group" blinks on the display and depends upon the number of machine groups.

CHANGING THE WATER IN THE BOILER - Procedure to carry out at least once a day






Keep a hot water distributor key (13a - 13c) pressed down for approximately 5 seconds.

The following message will be displayed: "WATER CHANGE". The water from the boiler will drain from the hot water nozzle (10) (60 - 70% ca. of the total capacity). Dispensing will stop automatically.

After the procedure, the machine will return to its normal functions and the boiler will be refilled with fresh water.

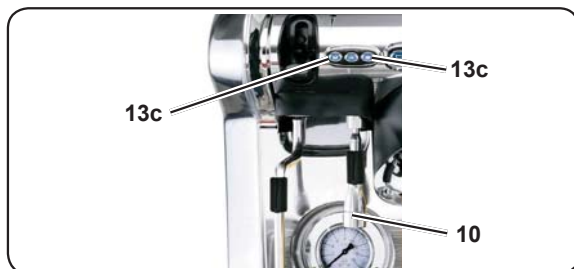


FILTER-HOLDERS - This operation must be made on all the filter-holders at the end of each working day

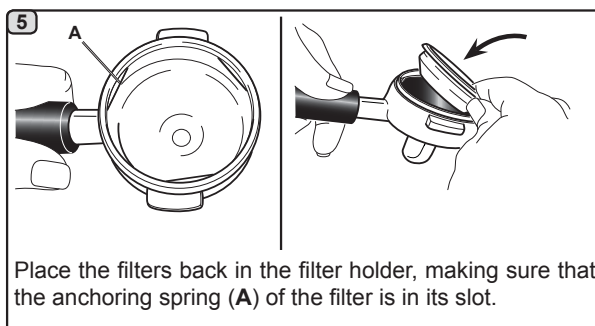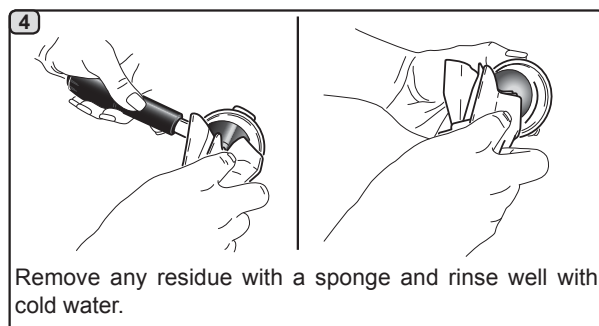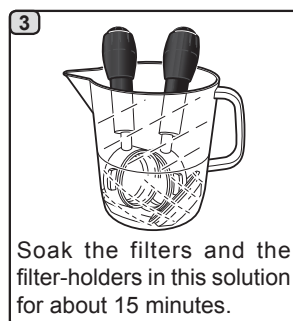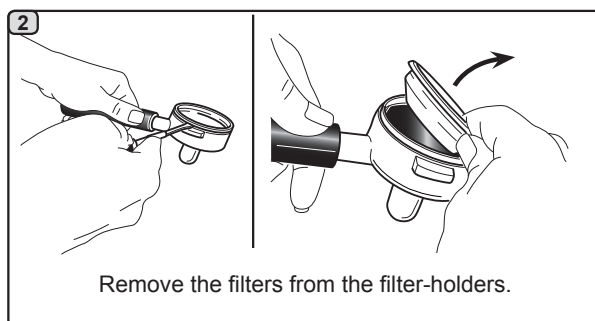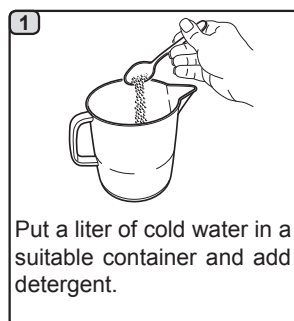

STEAM AND HOT WATER DISPENSING PIPES - This operation must be made at the end of each working day



Using a clean sponge, wash with hot water removing any organic residue present. Rinse carefully.

To clean the inside of the steam nozzles, follow these steps: Turn the nozzle towards the cup tray and carefully activate steam dispensing at least once.

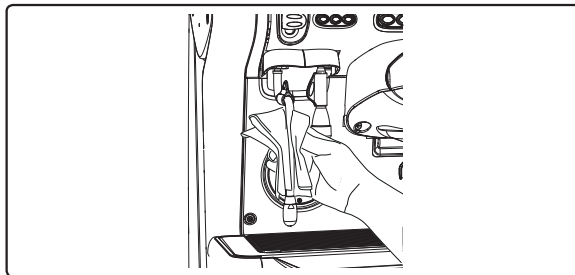

NOTE: the procedures described below can also be carried out when the machine is switched off.

GRILLE AND DRIP BASIN - This operation must be made at the end of each working day

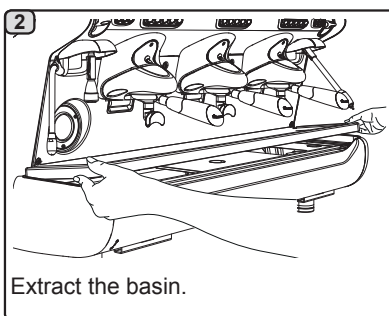
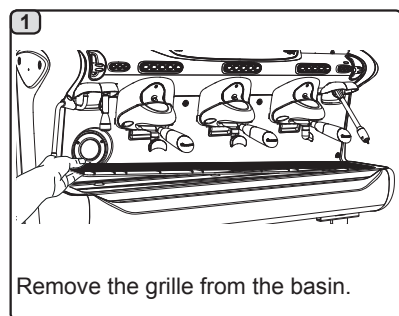


Rinse the grid and tray under running water.

DISCHARGE BASIN


- This operation must be made every 7 days

1. After removing the tray, remove the lid to the draining tray.
2. Remove any residues with a sponge and rinse well with cold water.

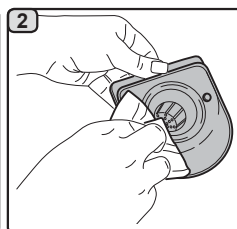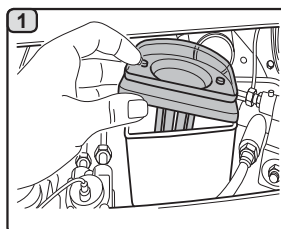

- This operation must be made at the end of each working day


Pour about a liter of hot water into the discharge basin to remove any discharge residues.

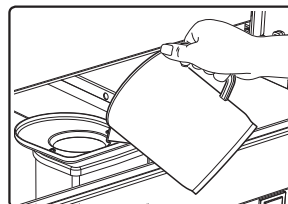

BODYWORK - This operation must be made at the end of each working day

Use a soft cloth and cleaning products WITHOUT ammonia or abrasives, removing any organic residue present in the work area.

NOTE. Do not spray liquids into the panel slots.

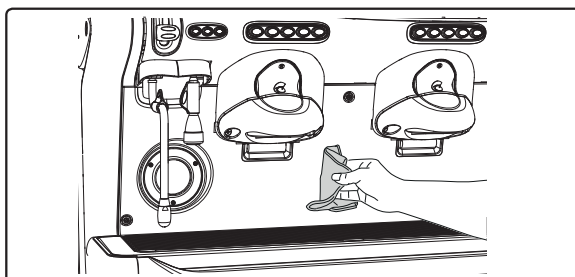

25. Defects - Malfunctions

Direct action by the customer

Before calling service personnel, to avoid useless expense, check whether the machine problem corresponds to one of the cases listed below.

DEFECT	CAUSE	REMEDY
The coffee machine does not work and the display (14) is blank.	No electricity.	Check that the electricity is on. Check the position of the main switch (1).
The coffee machine doesn't work even though the main switch is in the correct position.	Wrong programming of the switch-on times.	Press the STOP (37) key for a few seconds to force switch-on. Reprogram the clock.
Leak from edge of filter-holder (21, 25).	The undercup gasket is dirty with coffee residue.	Clean with the supplied brush.
Coffee flow time too short.	Coffee grinds too coarse. Coffee too old.	Grind the coffee more finely. Change the coffee
Water leaks from under the machine.	Drainage tank clogged. Discharge pan hole blocked.	Clean the tank. Clean.
Machine heated up, but it does not dispense coffee.	Water supply or water softener tap closed. No water in system.	Open. Wait until water is available or call a plumber.
The automatic level control devices remain in operation.	Same causes as above.	Same solution as above.
The coffee is warm and weak (after normal time of brew and flow).	Air bubble in thermosyphonic circulation system.	Press the coffee distribution button 2/3 times to try and eliminate the air bubble.
The reading on the pressure gauge (8) of the pump pressure is greater than 9 bars.	The pump's by-pass valve is blocked.	Call the authorized servicing department.



LI SERVICE LINE



A



B



C



D

